


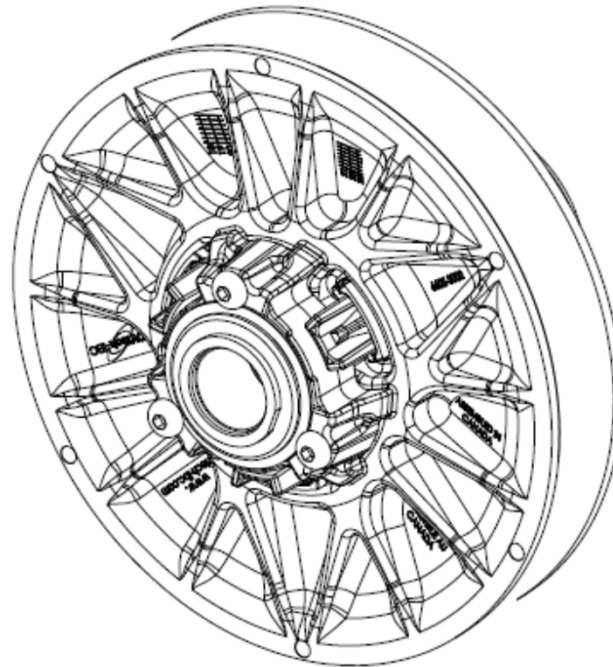

INSTALLATION AND MAINTENANCE GUIDE FOR A CONTINUOUSLY VARIABLE DRIVEN PULLEY SERIES 66



www.cvtech-ibc.com

CVTech-IBC inc.
300, rue Labonté,
Drummondville (Québec)
Canada J2C 6X9

Document : 6646-5001-EN-rev1

April 2023

TABLE OF CONTENTS

IMPORTANT NOTICE	3
MAINTENANCE FREQUENCY	4
NECESSARY HANDLING TOOLS	5
PULLEY INSTALLATION AND TIGHTENING ON THE VEHICLE	6
PULLEY GEOMETRICAL SPECIFICATIONS	7
PULLEY REMOVAL FROM THE VEHICLE	8
DRIVE BELT INSPECTION	9
PULLEY DISASSEMBLY	10-11-12-13
SLIDING SHEAVE MAINTENANCE	14
PULLEY RE-ASSEMBLY	15

IMPORTANT NOTICE

Only qualified personnel should perform maintenance and repair operations on this continuously variable pulley.



Means there is a risk of serious injuries if the instructions are not followed as described.



Means that, when performing this step, there is a risk of damaging a part or may cause components malfunction.

CVTech shall not be liable for any damage or injury resulting from misunderstanding of the text, improper use of the transmission system, or improper use of the recommended tools.

It is very important to always use the indicated tightening torque.

MAINTENANCE FREQUENCY



This continuously variable pulley does not require any lubrication. It is designed to work without any lubricant. Given this, certain rules of cleanliness must be applied when handling the system to avoid having any lubricants come into contact with its components.



To increase the life of the continuously variable pulley, it is strongly recommended that you respect the following recommendations:

- Perform maintenance according to the table below.
- Replace the worn parts. This ensures correct operation and will prevent any warranty from being excluded from the continuously variable pulley.

Description	Maintenance interval	
	Every 5 000 Km or 250 h	Every 10 000 Km or 500 h
Driven pulley	Visual inspection	Disassemble and Clean
Fixed sheave	Visual inspection	Clean
Sliding sheave	Visual inspection	Clean
Cam	Visual inspection	Clean
Cam shoes	Dimension / Visual	Replacement recommended
Drive belt	Dimension / Visual	Dimension / Visual

NECESSARY HANDLING TOOLS

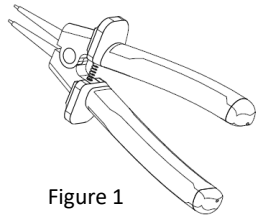


Figure 1
Snap ring pliers

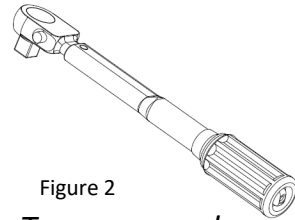


Figure 2
Torque wrench

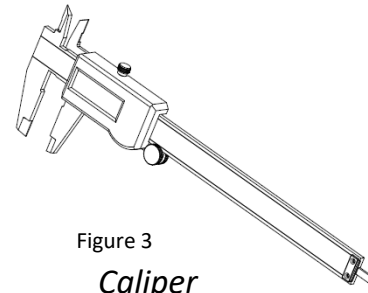


Figure 3
Caliper

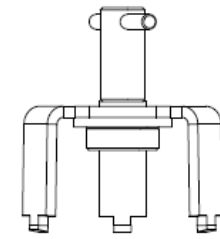


Figure 4
**Flange spreader*
(6655-0002)

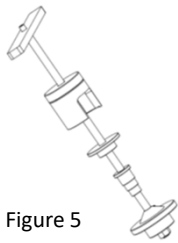


Figure 5
**Pulley disassembly tool*
(5055-0002)

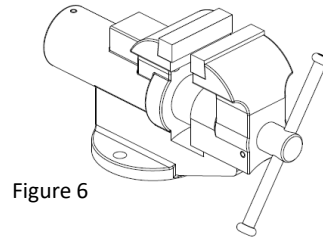


Figure 6
Vice



Figure 7
** Alignment tool*
Refer to owner's manual
for part number

 


Figure 8
Appropriate socket for
removing pulley fixation
bolt

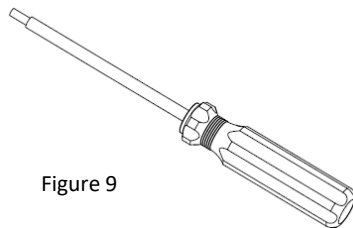


Figure 9
No. 20 Torx screwdriver

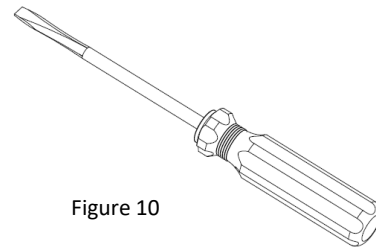


Figure 10
Flat head screwdriver



Important: Using impact tools is not recommended.

**** Tool available from CVTech***

PULLEY INSTALLATION AND TIGHTENING ON THE VEHICLE

Driven pulley installation

- Assemble the driven pulley onto the gearbox shaft.

Recommended torque: Refer to owner's manual

- To tighten the driven pulley, engage the transmission on a gear and prevent the vehicle from moving using the vehicle brakes.

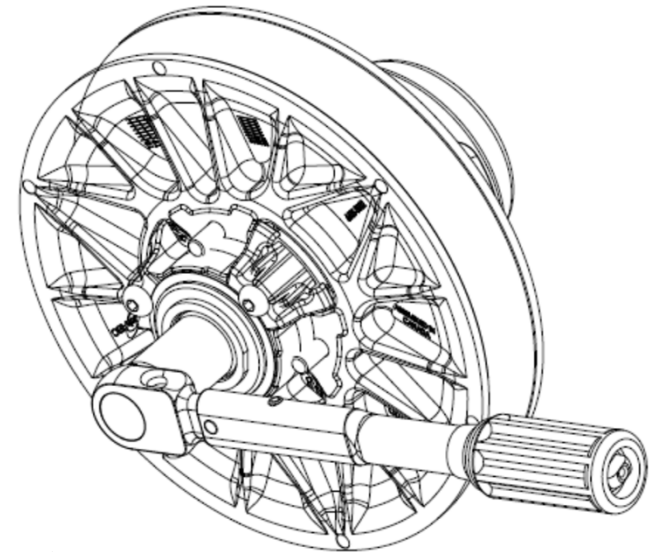


Figure 11



Do not forget to remove the tools from the driven pulley once the installation is completed.



Before you start the engine:

- Make sure all the components are clean, without any trace of oil, dust or contaminant.
- Do not use any lubricant.

PULLEYS GEOMETRICAL SPECIFICATIONS

Alignment between pulleys

- After completing the installation, check the alignment between the pulleys with the alignment tool. Make sure to obtain dimension A (figure 12) and the proper alignment tool part number (refer to owner's manual for both).
- If dimension A is out of tolerance, you can add or remove shims from the gearbox shaft to help reach it.

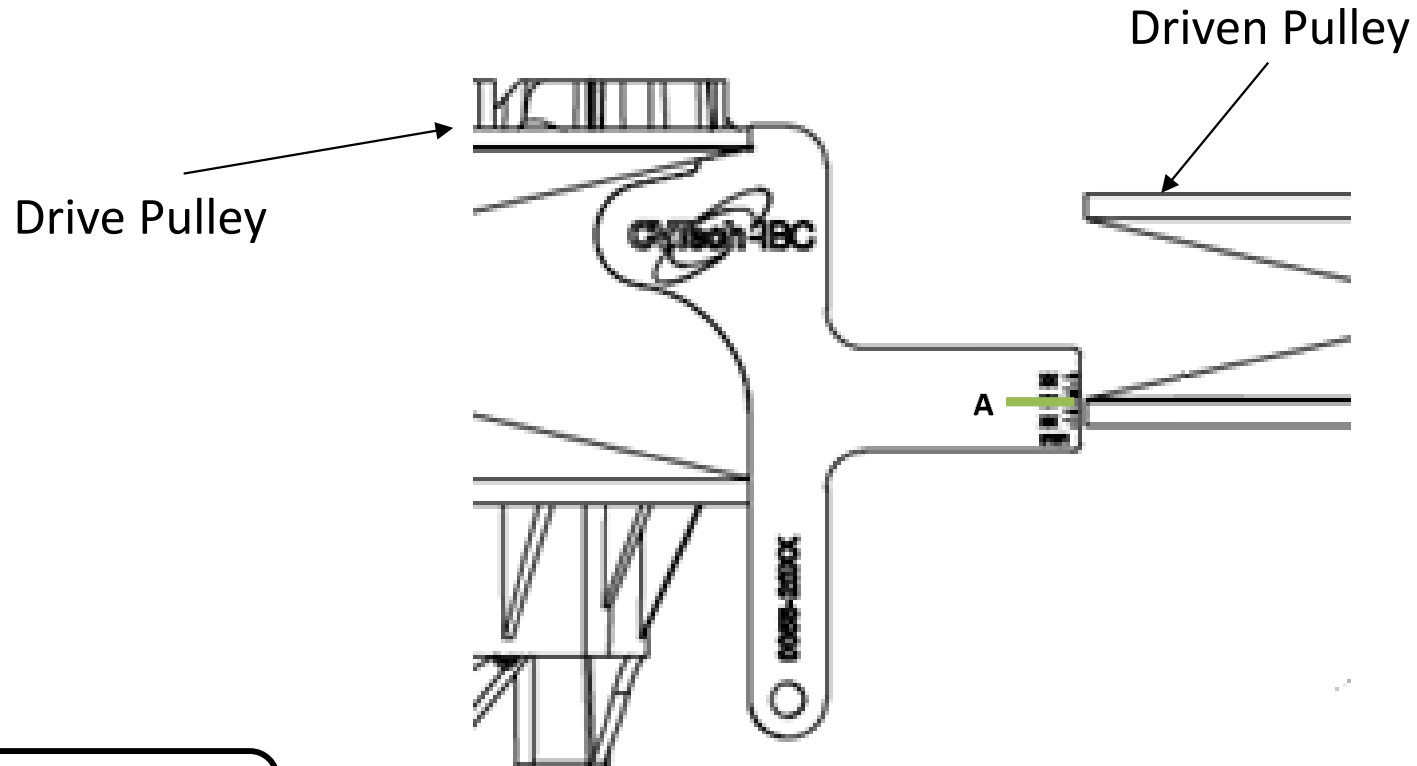



Figure 12

 The 2 pulleys are shown for illustration purposes only

PULLEY REMOVAL FROM THE VEHICLE

Removing the driven pulley:

- Lock the pulley rotation by engaging in gear and apply the vehicle brakes.
- If the drive belt is installed, use the flange spreader "A", as shown in figure 13, to remove the drive belt.
- Here is how to make good use of the flange spreader:
 1. Align the 3 tabs of the tool with the 3 sliders (or towers) of the pulley.
 2. Screw (about 4-5 turns) the central part of the tool in the pulley threads; if necessary, remove the pulley fixation screw or nut if there is interference.
 3. Use the handle to screw on the tool to open the pulley and release the belt.
 4. Remove the flange spreader.
- If you have not done so previously, remove the bolt or nut from the driven pulley.
- Remove the pulley from the vehicle.

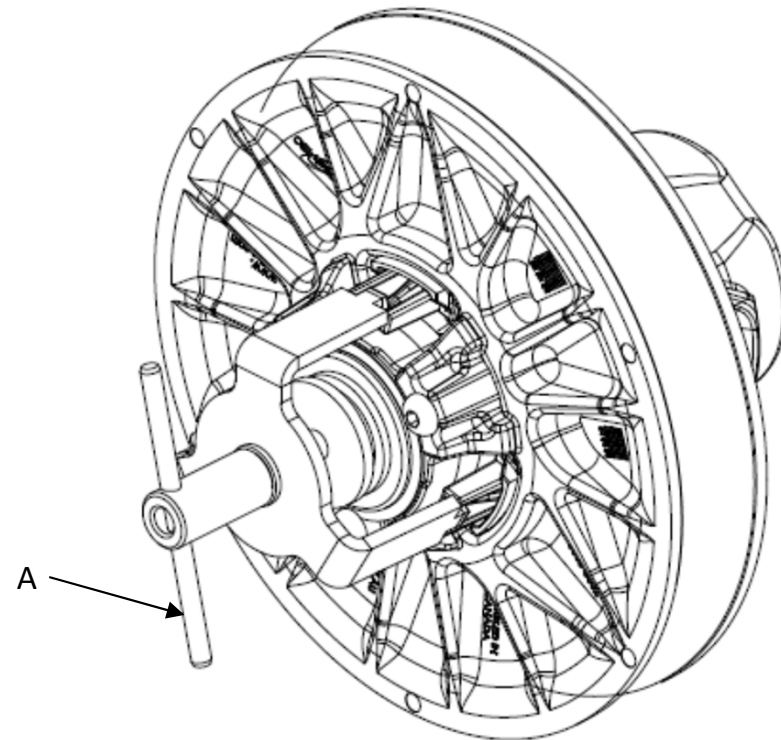


Figure 13



Before disassembling the CVT belt, identify drive belt rotation direction so that it will be the same when reassembling.

DRIVE BELT INSPECTION



The drive belt must be inspected in order to avoid risk of personal injury and/or material damage.

- The drive belt must be replaced if cracks are seen when turning it inside out.

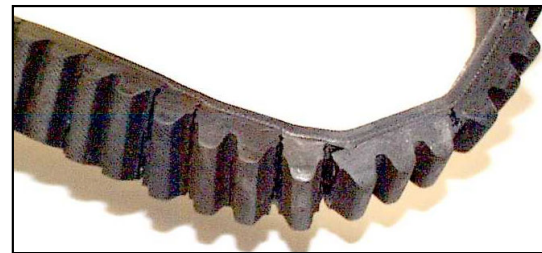


Figure 14

- The drive belt must be replaced when the width at the cord level is approximately 2 mm less than a new belt (refer to owner's manual).
- Make sure to take the measurement at the cord level of the belt.

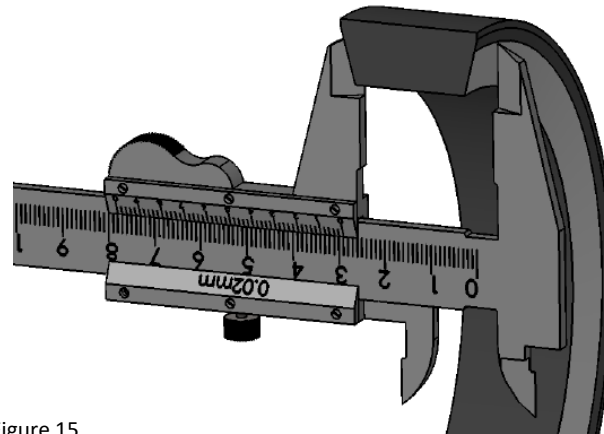


Figure 15

PULLEY DISASSEMBLY

- 1 Shaft Assembly
- 2 Fixed Sheave
- 3 Sliding Shoe
- 4 Sliding Sheave
- 5 Cam shoe
- 6 Cam Shoe Screw
- 7 Spring
- 8 Key
- 9 Cam
- 10 External retaining ring

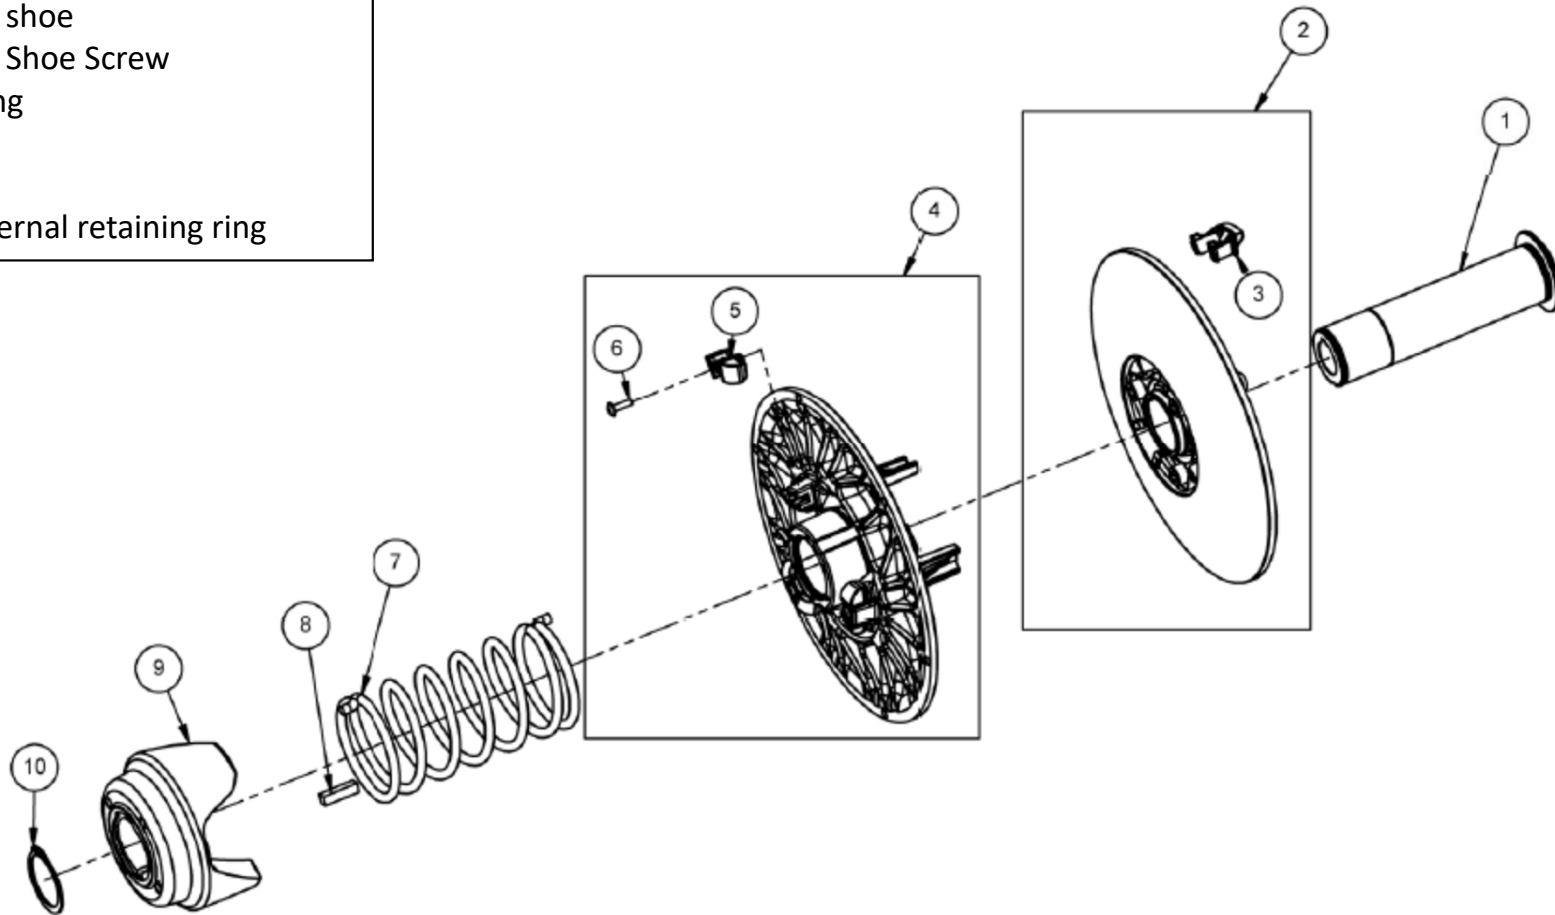


Figure 16

PULLEY DISASSEMBLY




Make sure you take note of the position of the spring (7) lugs in the sliding sheave (4) and cam (9) holes, as well as the alignment of the cam (9) versus the cam shoe support. When re-assembling the pulley, the positions must be the same as before disassembly. This ensures that pulley performance is not affected.



Use the disassembly tool (see figure 19, next page) to disassemble the cam (9). The pulley is spring loaded with significant amount of force, the use of the disassembly tool will keep the pulley compressed.

Clockwise engine

Counterclockwise engine

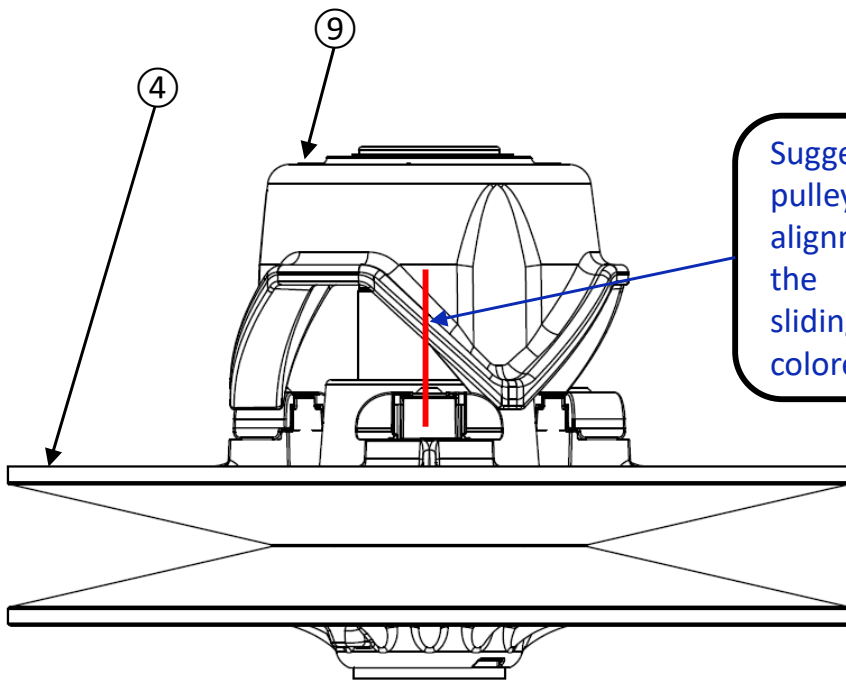

Suggestion: on the pulley, mark the alignment between the cam and the sliding flange with a colored line

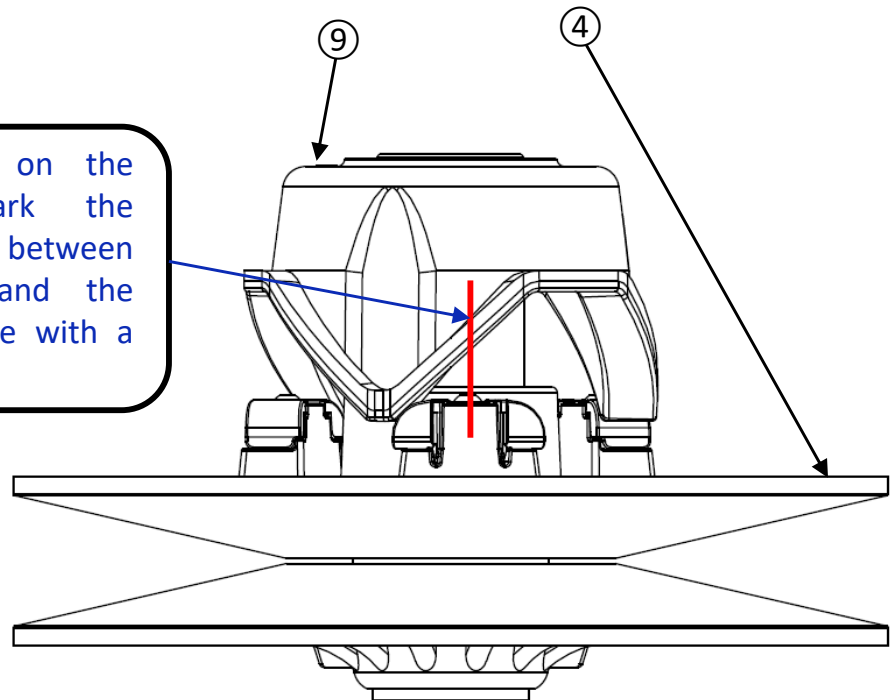


Figure 17

Figure 18

PULLEY DISASSEMBLY

Cam ⑨ disassembly

- Using a vice, mount the disassembly tool as shown in figure 19.
- Install the pulley on the disassembly tool as shown in figure 20.
- By screwing the bar on the threaded rod, press down the cam ⑨ (3 to 4 mm max.) in order to release the retaining ring ⑩.
- Remove the retaining ring ⑩ using the snap ring pliers (figure 21).
- Slowly unscrew the bar on the threaded rod to release the spring ⑦ tension (figure 22).



Slowly lift the cam ⑨ to free it from the shaft assembly ① by unscrewing the disassembly tool once the retaining ring ⑩ is removed.



Never remove the bar from the disassembly tool until the cam ⑨ is in a free state (Figure 22)

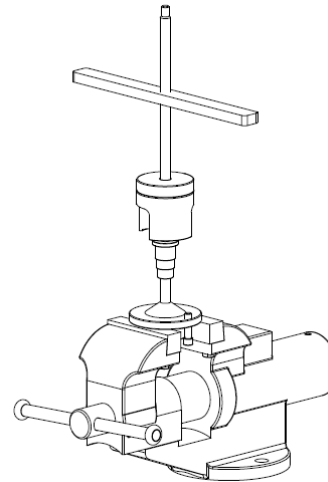


Figure 19

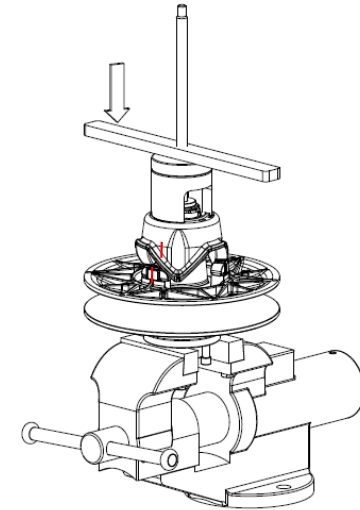


Figure 20

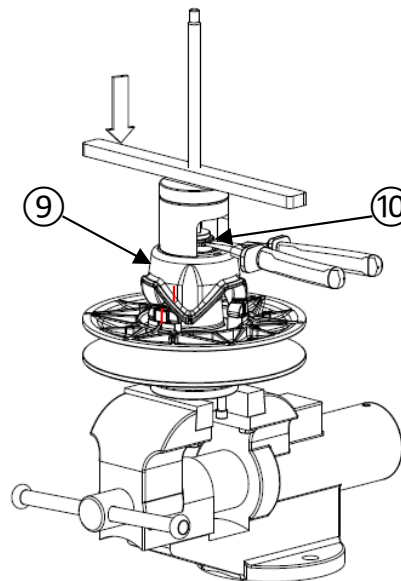


Figure 21

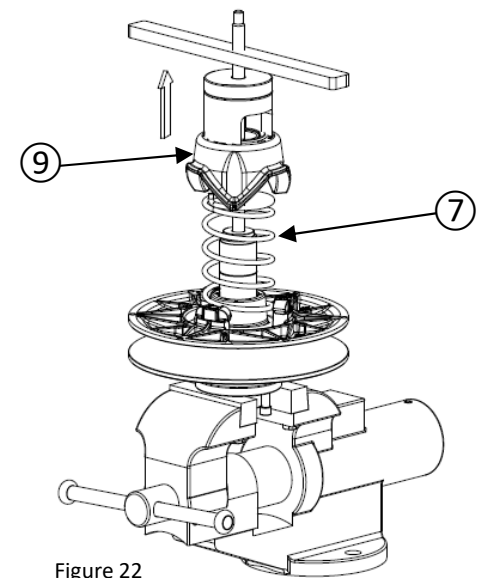


Figure 22

PULLEY DISASSEMBLY

Recommended inspection

- Check for wear marks on the cam ⑨.
- Check for wear marks on the spring ⑦.
- Perform a visual inspection of the components.
- Check the wear on the bushings of the fixed sheave ② and the sliding sheave ④ (visual inspection only, figures 23 and 24). In case of excessive wear, you must replace the entire fixed sheave ② or sliding sheave ④. Check for wear marks on the shaft assembly ① (figure 25).

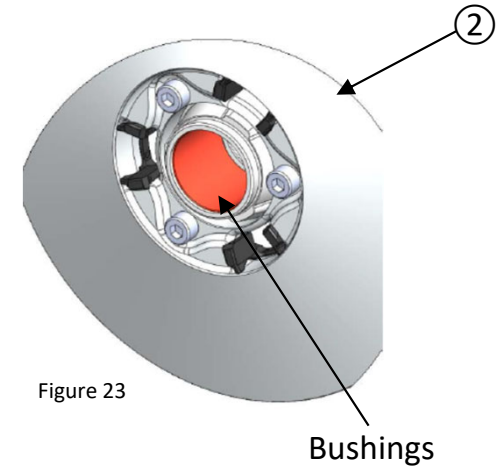


Figure 23

Bushings



The bushings cannot be removed from the fixed sheave ② and the sliding sheave ④ (figures 23 and 24).



The shaft assembly ① can be removed from the fixed sheave ② (figure 25).



To maintain the performance of the pulley, make sure the sheaves bushings are cleaned with a microfiber towel or dry cloth. **CAUTION:** Do not use acetone to clean bushing and do not use any lubricant.

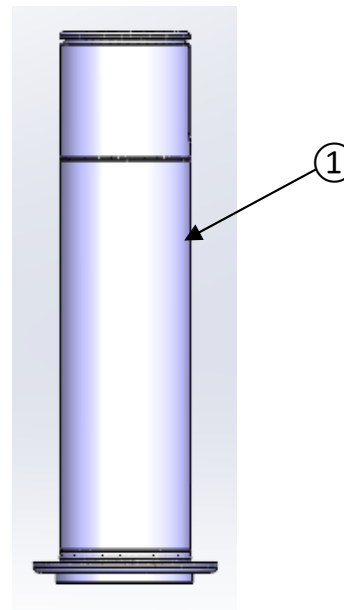


Figure 25

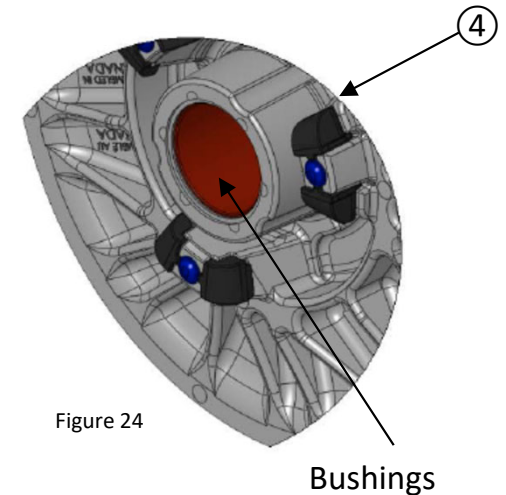


Figure 24

Bushings

SLIDING FLANGE MAINTENANCE

Recommended inspection

- If the cam shoes ⑤ are worn down to about 1 mm before making contact with the cam shoe support, they must be replaced (figure 26).

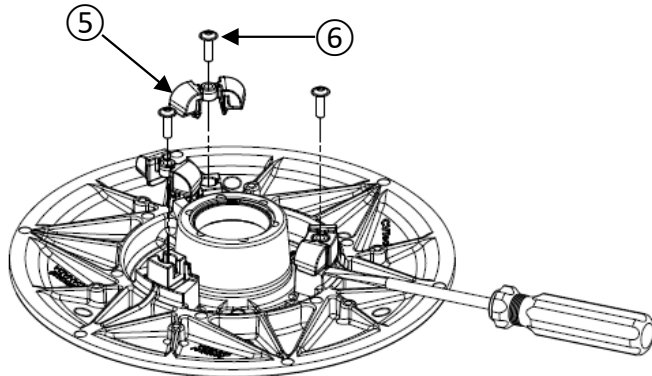


Figure 27

After removing the cam shoe screws ⑥ with a No. 20 Torx screwdriver, the cam shoes ⑤ can be removed using a flathead screwdriver.

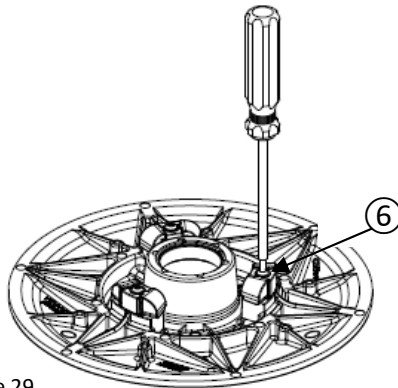


Figure 29

Tighten the cam shoe screws ⑥ using a no. 20 Torx screwdriver to a value of 3,5 Nm

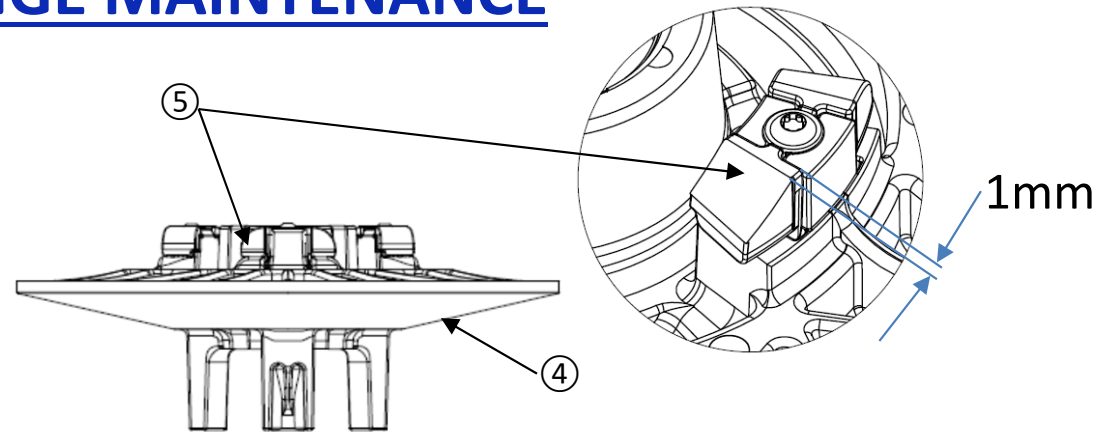


Figure 26

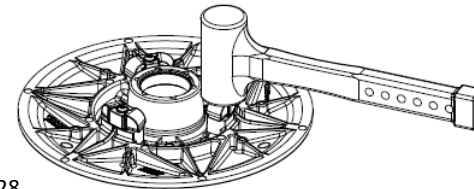


Figure 28

Mount the new cam shoes ⑤ using a hammer.



Gently hit the cam shoes ⑤ in order not to damage them.



Always change all 3 cam shoes ⑤ at the same time.

PULLEY RE-ASSEMBLY



The use of the disassembly tool is required in order to re-assemble the pulley.

Pulley re-assembly

- Install the shaft assembly ① and the fixed sheave ② on the disassembly tool (figure 30).
- Put the sliding sheave ④ on the fixed sheave ② and the shaft assembly ① (figure 31).
- Insert the spring ⑦ lugs into the proper cam ⑨ and sliding sheave ④ holes, at the same positions noted during the disassembly steps (figure 32).
- Press down the cam ⑨ onto the shaft assembly ① using the disassembly tool. Position the key ⑧ into the shaft assembly ① groove (figure 33 and 34).
- Put the retaining ring ⑩ on the cam ⑨.
- Make sure that the fixed sheave ② is blocked in rotation, turn the cam ⑨ counter clockwise or clockwise to position the cam shoes ⑤ on the proper side of the cam ⑨ sliding surface as it was before disassembly.
- Screw the disassembly tool bar until the cam ⑨ is low enough to install the external retaining ring ⑩.

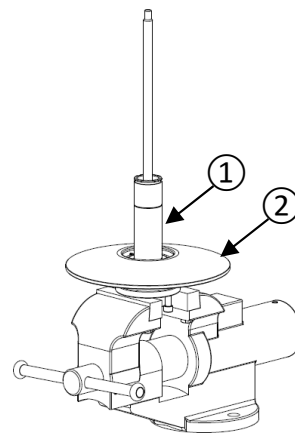


Figure 30

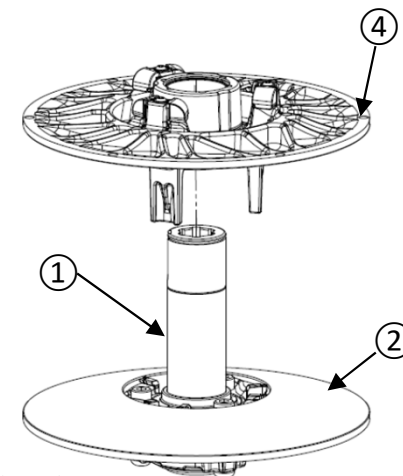


Figure 31

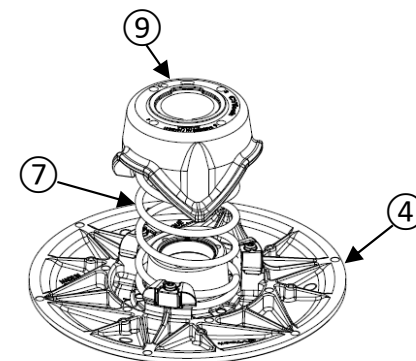


Figure 32

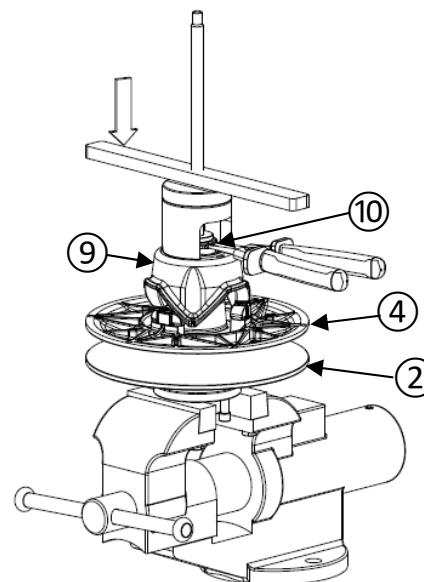


Figure 33

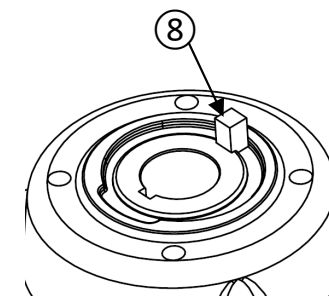


Figure 34